


LEVEL-LITE™ INSTALLATION INSTRUCTIONS

1. Use one Level-Lite per battery. Locate the Level-Lite in a center cell. The cells in the center use more water because they operate at a slightly higher temperature.
2. Use a 1/2" dia. drill bit (p/n BA-107) to form a hole in the cover. Drill the hole in the cover after the single point watering system (if used) is installed. Also, locate the hole in a position in the cover where there is direct access to the electrolyte below the hole.
3. Push the Level-Lite assembly fully into the hole so that the shoulder of the rubber sleeve is flush against the cover. Make sure the Level-Lite is pushed into the sleeve.
4. With the screw provided attach the terminal ring on the end of the wire coming from the Level-Lite to the intercell connector that is one cell over toward the negative battery cable (follow the electrical path from the positive (red) battery cable to the negative (black) battery cable to find the correct intercell connector).

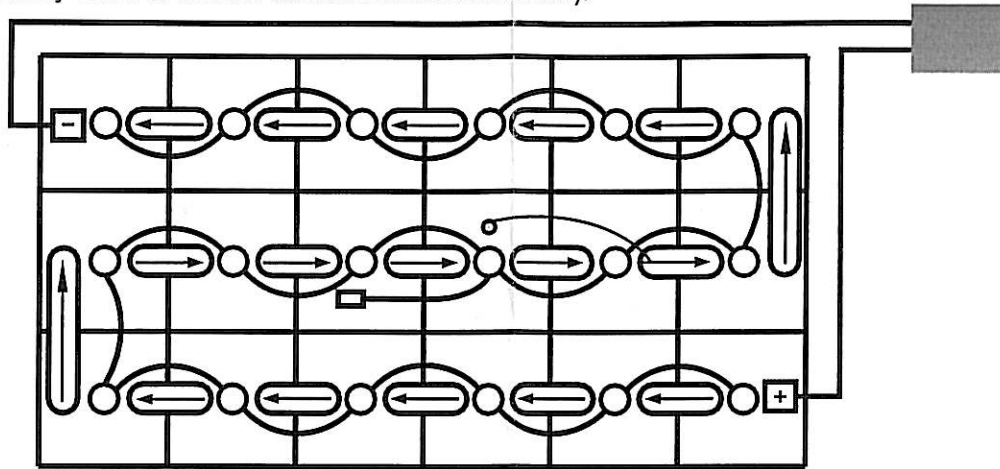

5. OPERATION: The Level-Lite will glow green when electrolyte level is adequate. When the light goes out, it is time to add water to the battery.