



[www.lakelite.com](http://www.lakelite.com)

**LAKE LITE INC.**

2301 Fairfield Ave, Suite 107, Fort Wayne, IN 46807 Phone: (260) 918-2758 Email:

### Battery Status Indicator Instructions:

The Battery Indicator displays the condition of your battery instantly. The Battery Indicator can be used with all 12 volt batteries, any size or type, including maintenance-free, deep cycle, and gel type.



### Installation Instructions:

1. Turn off all Motors or Accessories.
2. Carefully find the best location on or near your battery to stick the Battery Indicator so it can be seen and read easily.
3. Clean the surface where you plan to stick the indicator. Remove the backing and stick firmly on a clean dry spot.
4. Attach the Red Wire to the Positive Terminal, and the Black Wire to the Negative Terminal.

### Testing the Battery with the Battery Indicator:

The Battery Indicator gives you a quick and accurate indication of your battery's charge condition. It allows you to determine whether your battery is charging, needs to be charged, is not holding its charge, or needs to be replaced.

Always let the battery rest for a minimum of 8 hours for most accurate readings. Resting means that you do not charge discharge or run the motor for 8 hours. Test the battery with the battery Indicator only when the Motor is not in use.

1. Make sure the motor is not in use.
2. Press the Push button on the Battery Indicator
3. If no LEDs are lit, the battery is either dead or the Battery Indicator is not properly connected.