


WIRING DIAGRAM FOR BA-MS-105

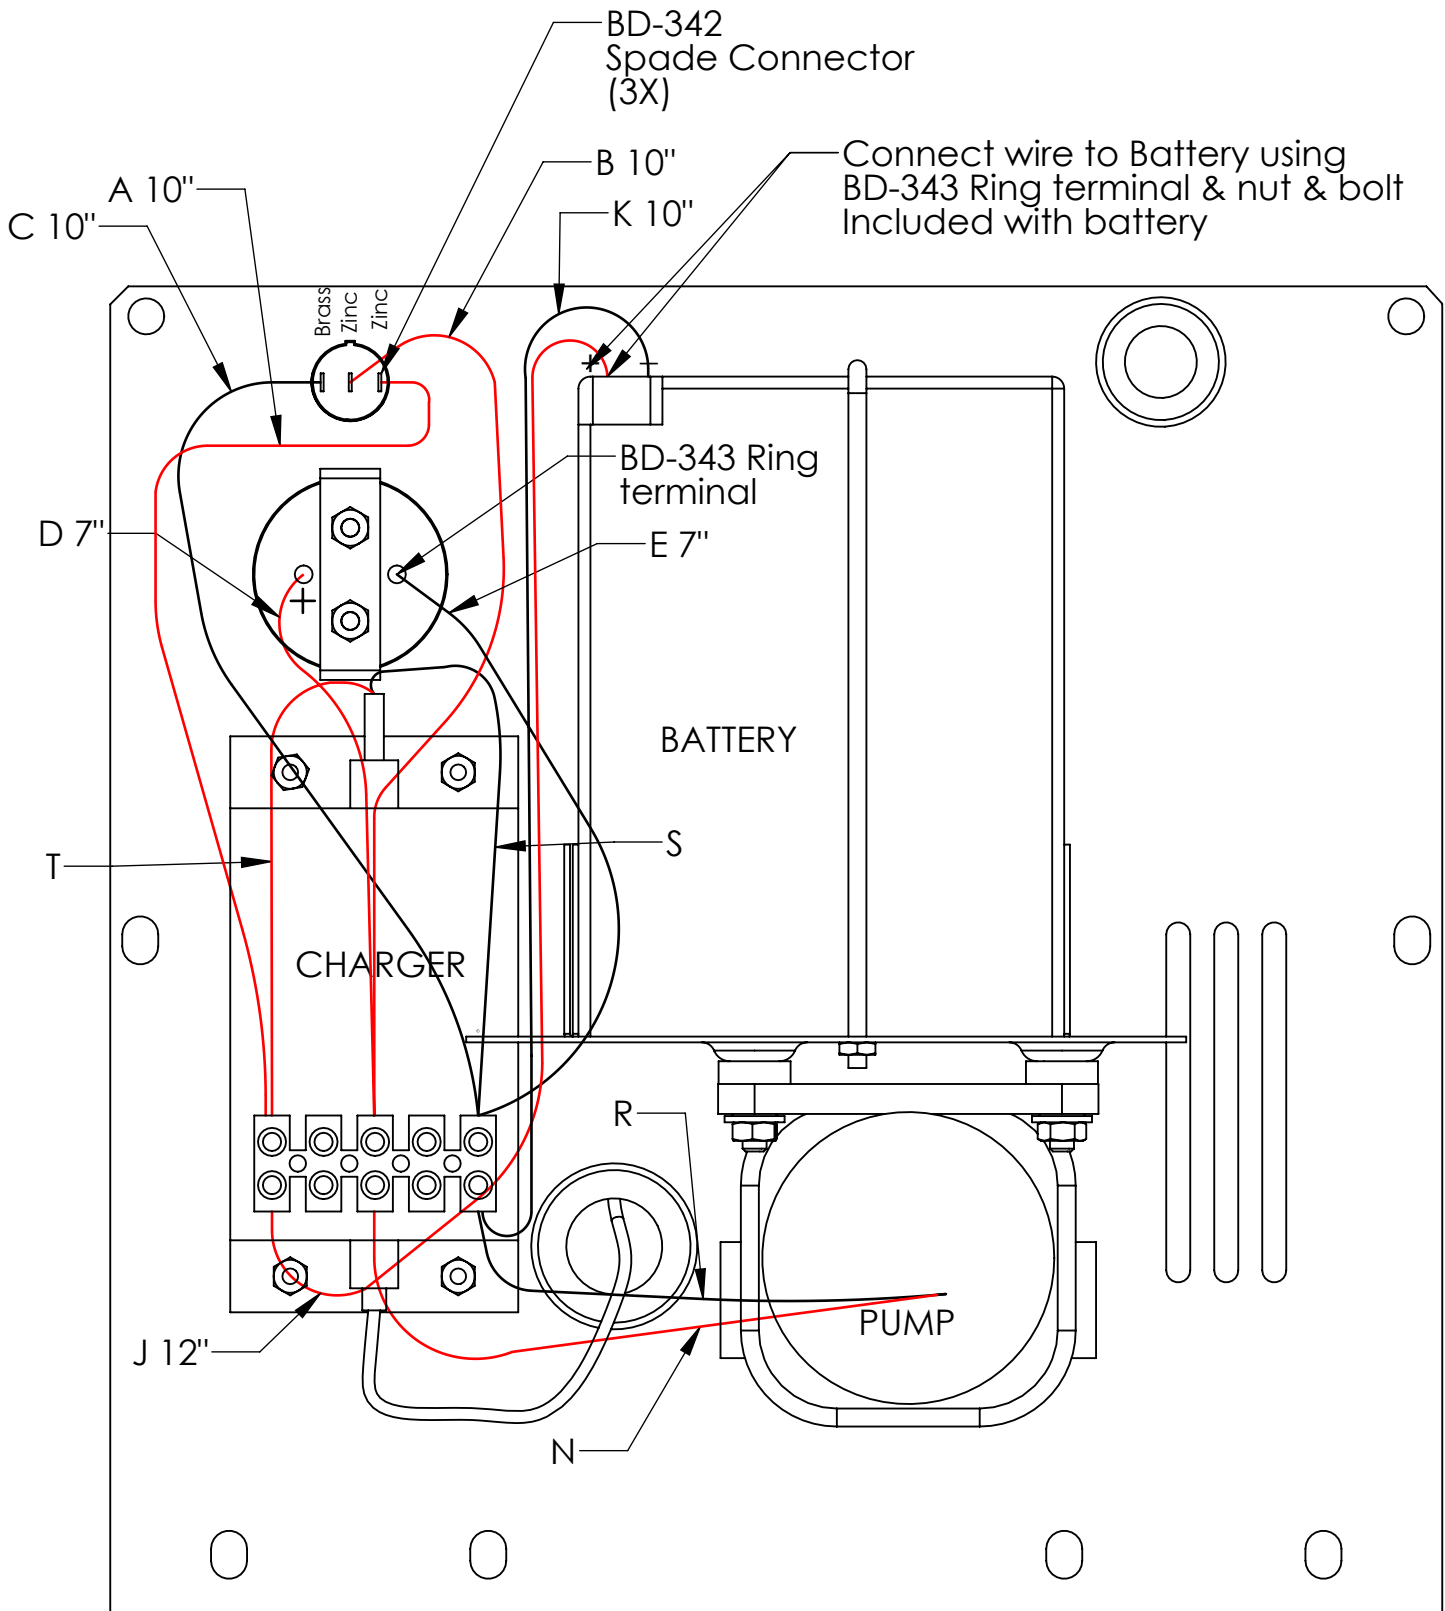

USE WIRE P/N BD-340BLK & BD-340RED

Note:
Using Butt Connector BD- 345
add 2" to Pump wire R and N
(total length should equal 10'')