





Qwik-Fill Installation & Operation

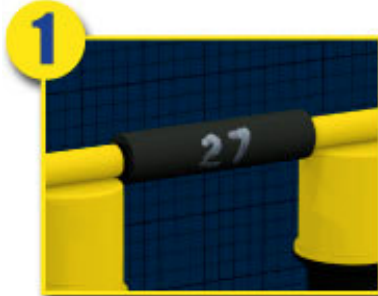

1. Join manifold assemblies together using the appropriate tube segment for your battery group size.

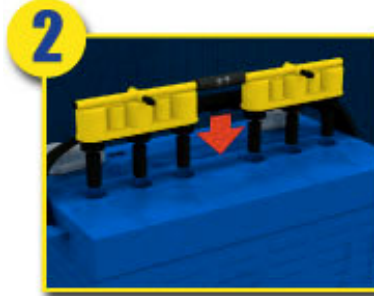

2. Remove vent covers and install manifolds assemblies into each battery.



3. Connect batteries together.



4. Install water supply tube to one barb and red cap to the remaining barb.



5. Connect the bulb pump to the fill line and insert the other end into your container of distilled water.



6. Begin pumping the squeeze bulb until it feels rigid. Your batteries are now filled to the proper level.

Distributed by JWP
e-mail:sales@janwp.com
Call Bob- 1-616 822 7587
www.janwp.com